


CC-1

TYPE MOLDS
Horizontal End to End
For AWG Conductors

MOLDS FOR AWG CONDUCTORS										
Cable	STANDARD CONNECTION					HEAVY DUTY CONNECTION				
	Mold #	Price Key	Weld Metal*	Handle Clamps	Lead Time	Mold #	Price Key	Weld Metal	Handle Clamps	Lead Time
#8	M-6021	4	15	B-106	2	M-6021-H	4	32	B-106	4
#6	M-200	4	25	B-106	2	M-200-H	4	45	B-106	4
#4	M-201	4	25	B-106	2	M-201-H	4	45	B-106	2
#2	M-203	4	32	B-106	2	M-203-H	4	65	B-106	2
#1	M-204	4	32	B-106	4	M-204-H	4	65	B-106	4
1/0	M-205	4	45	B-106	2	M-205-H	4	90	B-106	2
2/0	M-206	4	65	B-106	SDS	M-206-H	4	115	B-106	2
3/0	M-207	4	90	B-106	2	M-207-H	4	150	B-106	2
4/0	M-208	4	90	B-106	SDS	M-208-H	4	150	B-106	2
250 MCM	M-209	4	115	B-106	2	M-209-H	4	200	B-106	2
300 MCM	M-210	4	115	B-106	2	M-210-H	4	200	B-106	2
350 MCM	M-211	4	150	B-106	2	M-211-H	4	250	B-106	2
500 MCM	M-213	4	200	B-106	2	M-213-H	5	2-150	B-107	2
750 MCM	M-214	5	2-150	B-107	2	M-214-H	5	500	B-107	2
1000 MCM	M-215	5	2-200	B-107	2	M-215-H	5	3-250	B-107	4

Section 2 - Molds
AWG Conductors

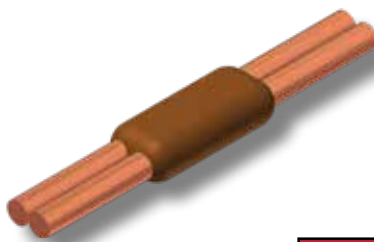

CC-14

TYPE MOLDS
Horizontal Parallel through Cables
For AWG Conductors

MOLDS FOR AWG CONDUCTORS						
Cable		Mold #	Price Key	Weld Metal	Handle Clamps	Lead Time
Run	Tap					
#8	#8	M-5709	18†	15	40-4565-00	2
#6	#6	M-5618	18†	25	40-4565-00	2

- For sizes not listed, contact thermOweld®.
- Molds listed are for concentric stranded cable. Add suffix "-S" to mold number for solid conductors.
- For molds with wear plates, see page 135.
- For expedited service, contact thermOweld®.
- To order weld metal for use with EZ Lite Remote® insert TW before and EZ after weld metal number.
- Required Tools;
 - Handle Clamps w/ Flint Ignitor (see chart for correct handles)
 - 38-0309-00 ~ Flint Ignitor or 38-EZLT-RU ~ EZ Lite Remote®
 - † ~ Sold complete with handles
- Other recommended accessories;
 - 40-0319-01 ~ Mold Cleaner for cartridge sizes #15-#65
 - 40-0319-03 ~ Mold Cleaner for cartridge sizes #90-#500
 - 38-3922-00 ~ Mold Cleaning Brush
 - 38-0135-00 ~ Cable Cleaning Brush
 - 38-0330-00 ~ Cable Clamp